
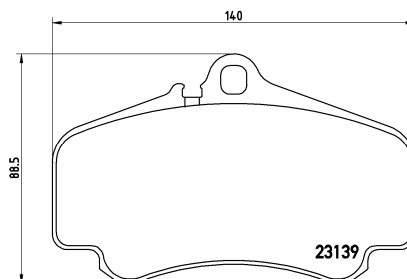




Bremsbelagsatz / Brake pad set

**Porsche 911 (996/997) – WVA 23139 (T1291) and WVA 23330**

Despite the backing-plate differences between the WVA No. 23330- with additional tilgerweights- and the WVA No. 23139 - without tilgerweights- the fitting is possible with both versions!

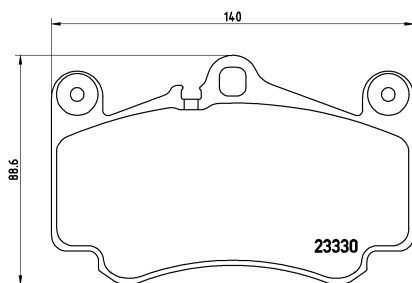

Following photos for a further demonstration:

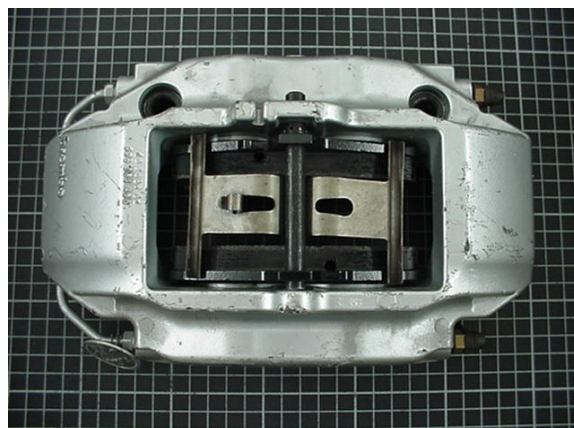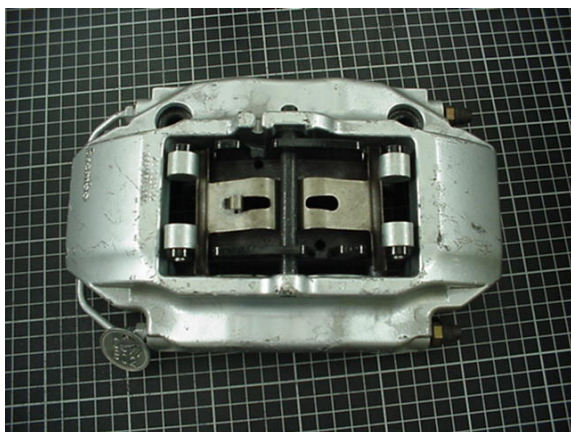

Tilgerweights are developed for comfort reasons. Due to the mix characteristic of PAGID reference **T1291 = WVA 23139** there is no need for an introduction of WVA 23330. Furthermore please consider that tilgerweights can even have a negative impact in combination with certain mixes!

**AM Productmanagement Team**

[www.pagid.com](http://www.pagid.com)

